

Micellization properties of cardanol as a renewable co-surfactant

Antonella Fontana,^{a,*} Susanna Guernelli,^b Nelsi Zaccheroni,^b Romina Zappacosta,^a Damiano

Genovese,^b Lucia De Crescentini,^c Serena Riel^d

^a Dipartimento di Farmacia, Università "G. d'Annunzio", Via dei Vestini 31, 66100 Chieti, Italy.

^b Dipartimento di Chimica "G. Ciamician", Università degli Studi di Bologna, Via S. Giacomo 2 and Via Selmi 2, 40126 Bologna, Italy.




^c Dipartimento di Scienze Biomolecolari, Università di Urbino, Via Maggetti 24, 60129 Urbino, Italy.


^d Dipartimento di Scienze e Tecnologie Biologiche, Chimiche e Farmaceutiche "STEBICEF", Università di Palermo, V.le delle Scienze, Parco d'Orleans II, Building 17, 90128, Palermo, Italy.

Supporting Information	page
1. Spectrophotometric measurements:	
Pure SDS and HC containing mixtures	S2
Pure CTAB and HC containing mixtures	S4
Pure C ₁₄ DMAO and HC containing mixtures	S6
Pure Triton X-100 and HC containing mixtures	S8
2. Surface tension measurements:	
Pure SDS and HC containing mixtures	S10
Pure CTAB and HC containing mixtures	S12
Pure C ₁₄ DMAO and HC containing mixtures	S14
Pure Triton X-100 and HC containing mixtures	S16
HC /SDS mixture in the presence of Orange OT	S18
Table S1. CMC values obtained by surface tensiometry	S19
3. DLS traces and correlation functions:	
Pure SDS and HC containing mixture	S20
Pure CTAB and HC containing mixture	S22
Pure C ₁₄ DMAO and HC containing mixture	S24
Pure Triton X-100 and HC containing mixture	S26




1. Spectrophotometric measurements


1.1 SDS

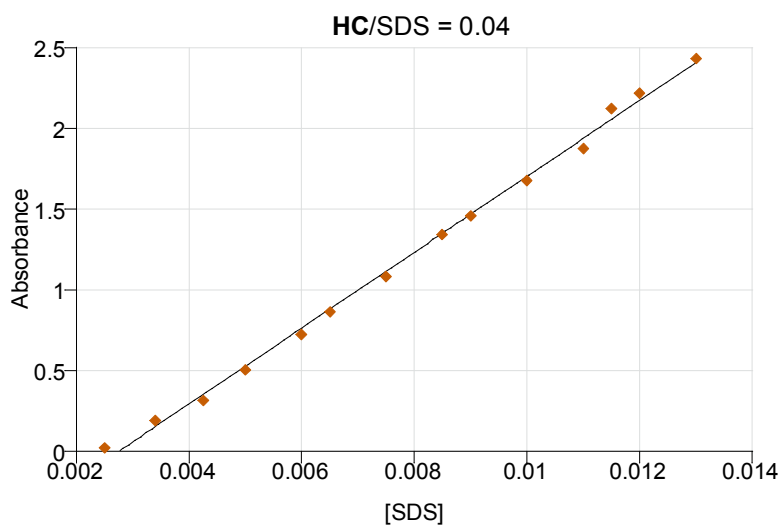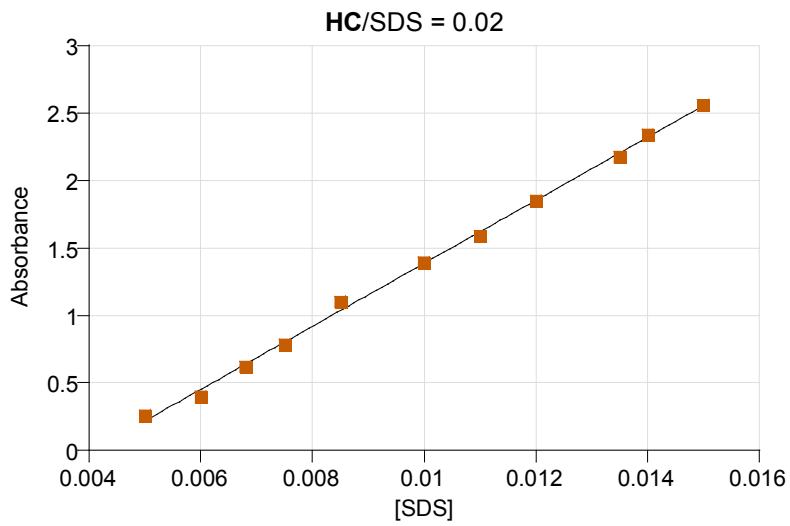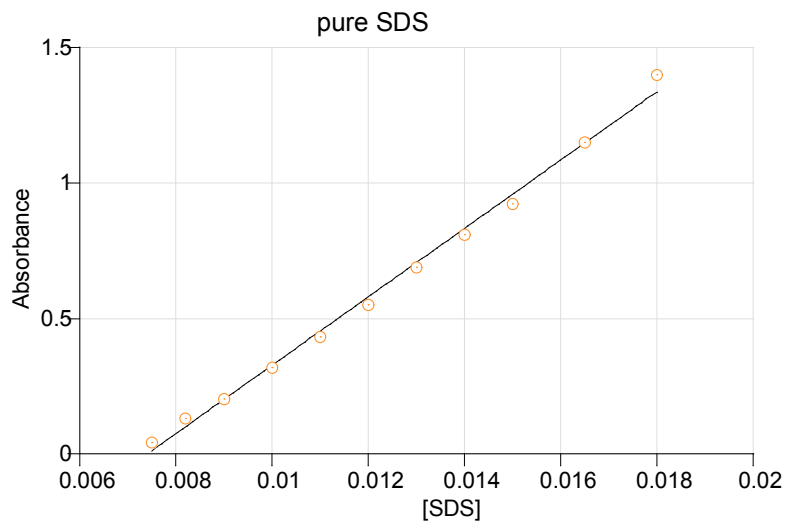



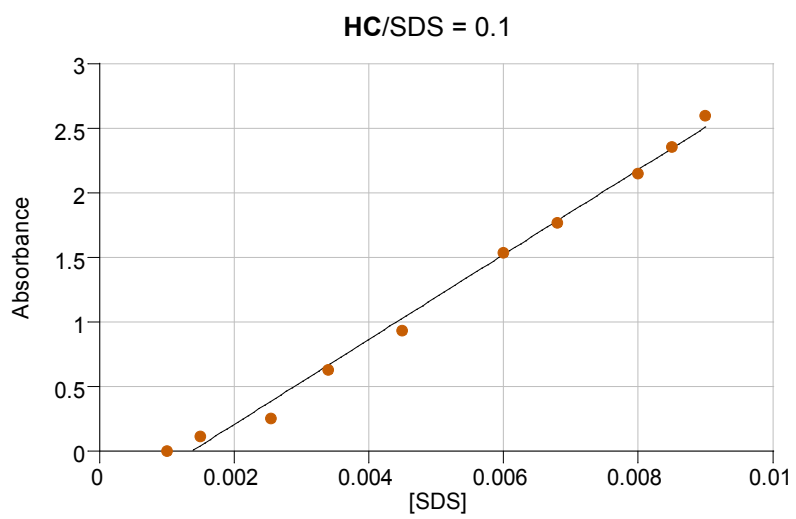



1.2 CTAB

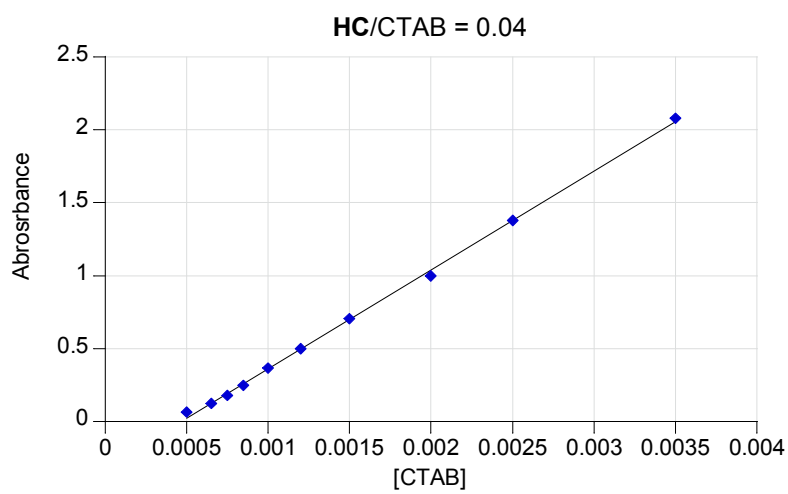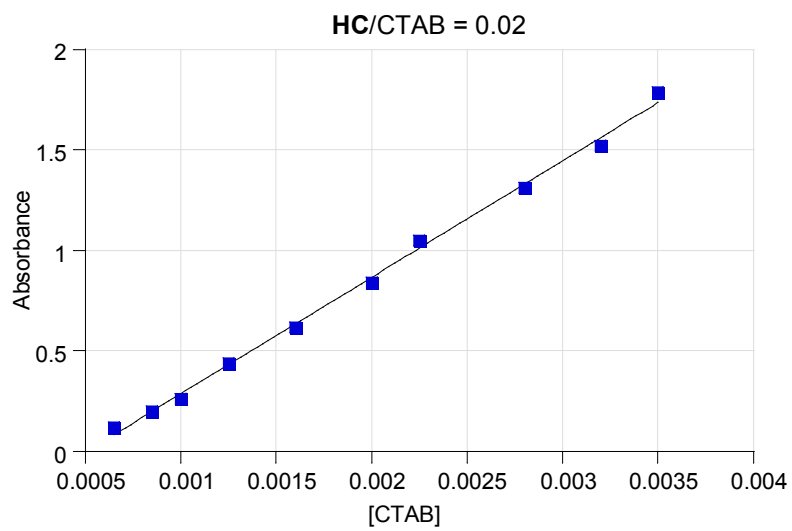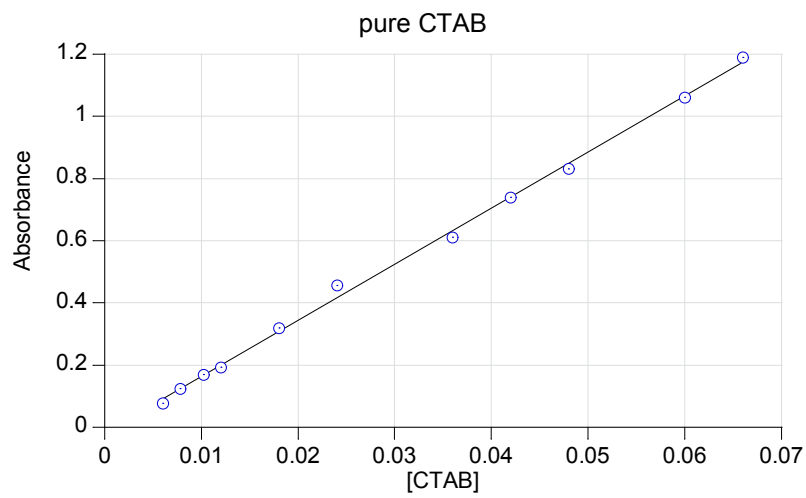



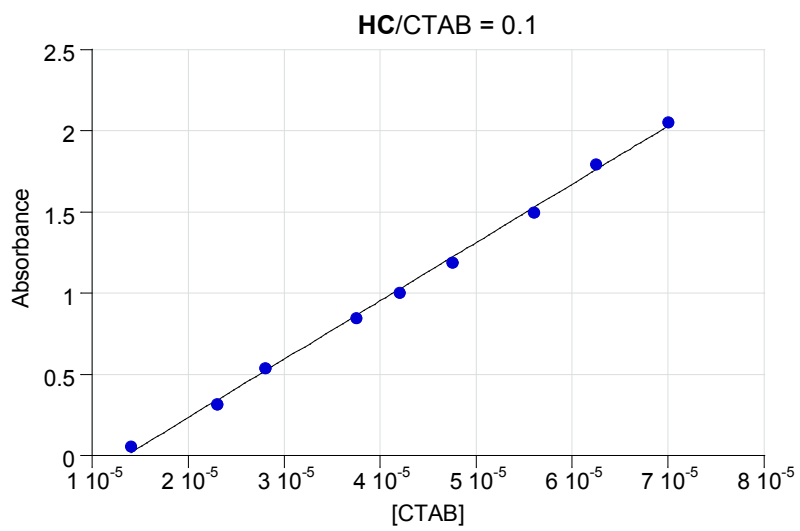



1.3 C₁₄DMAO

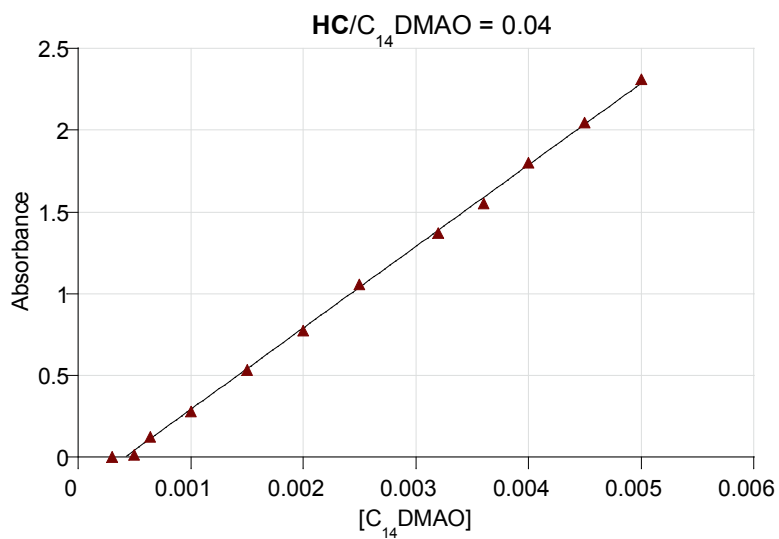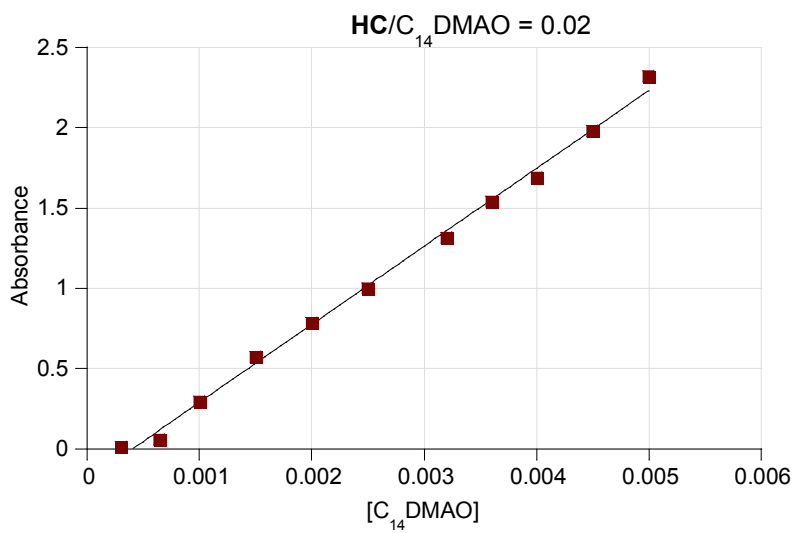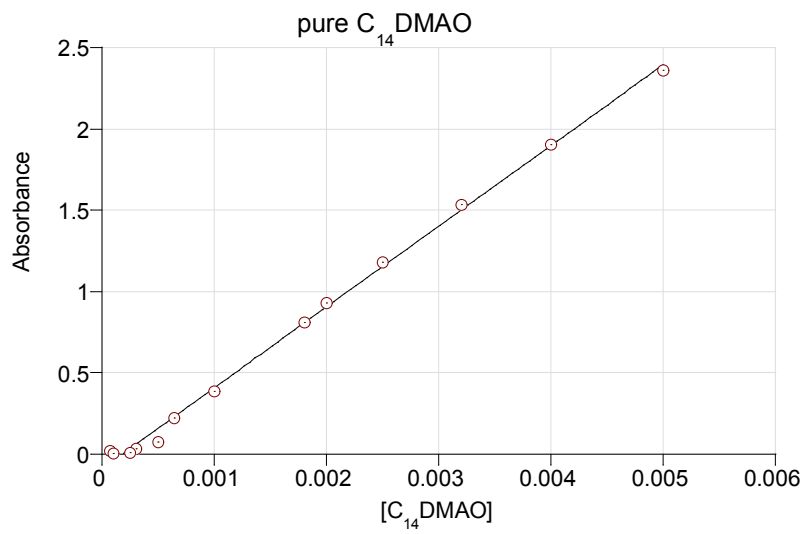

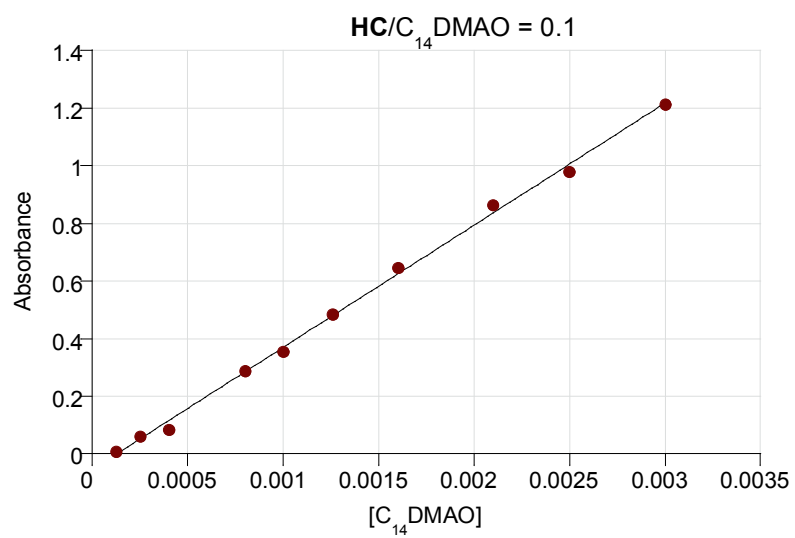



1.4 Triton X-100

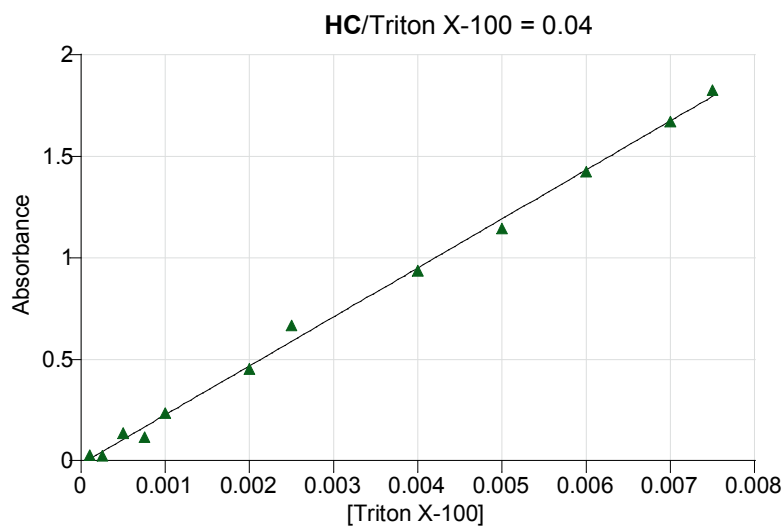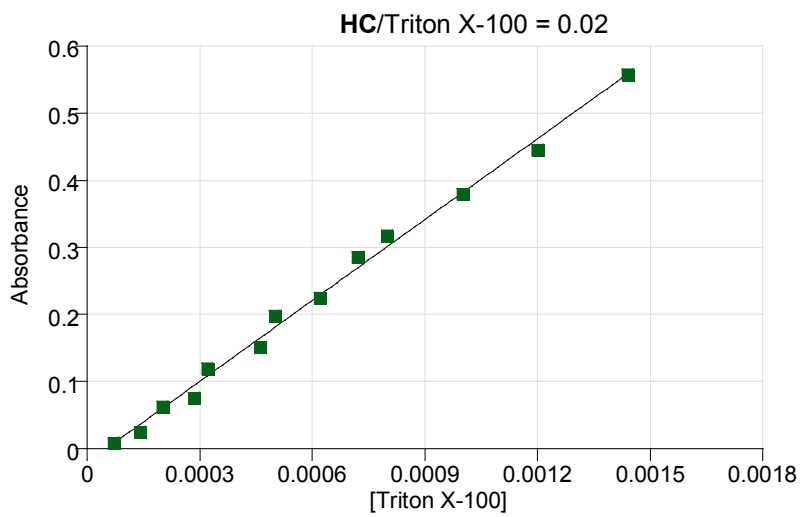
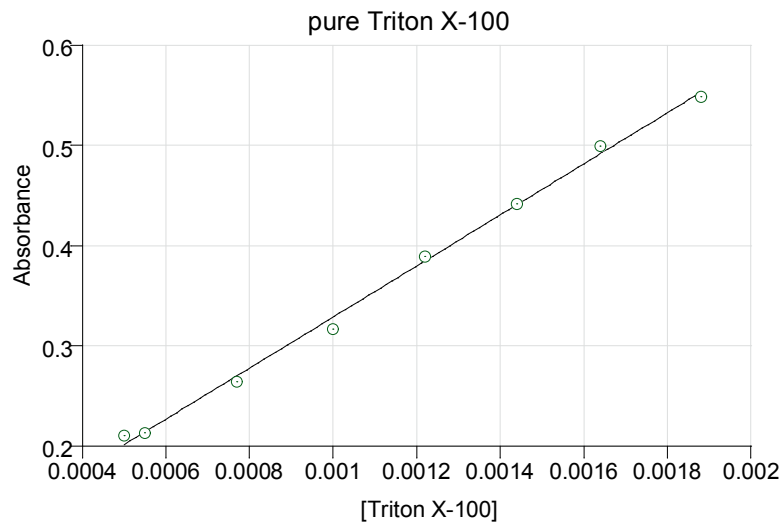


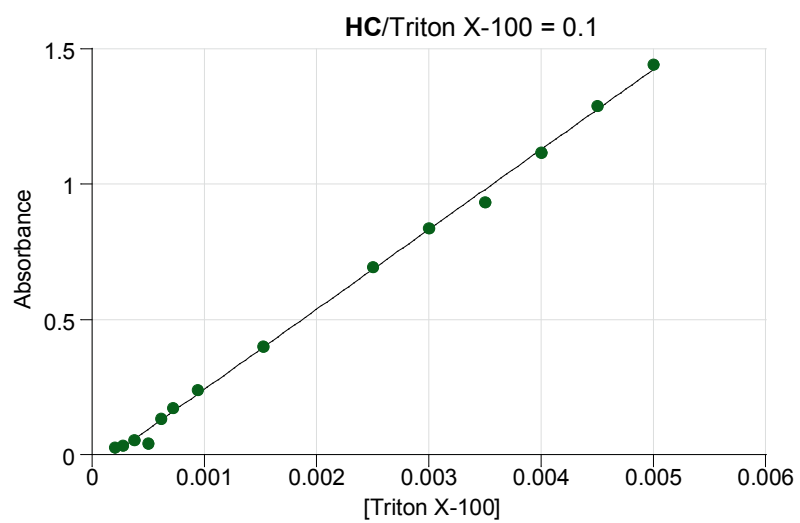



2. Surface tension measurements



2.1 SDS

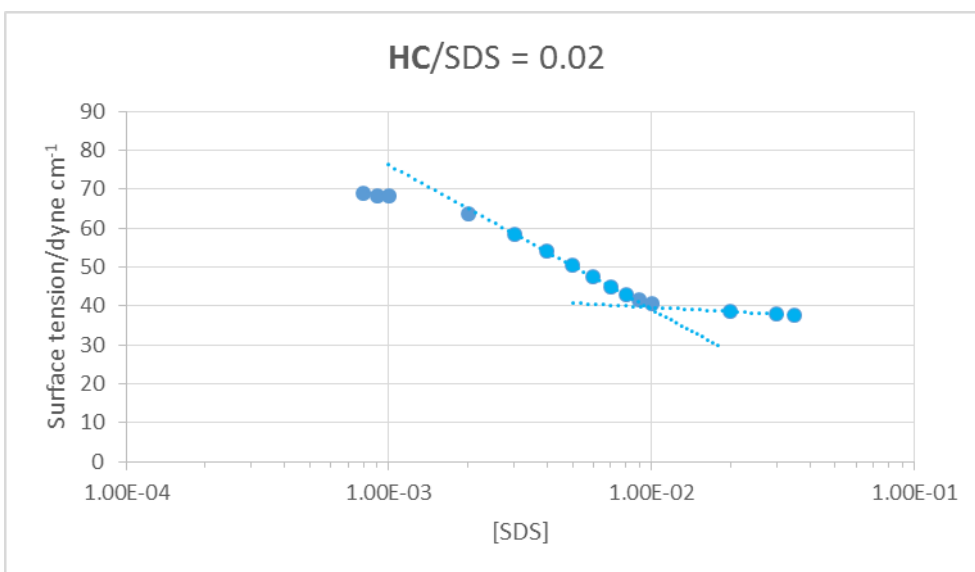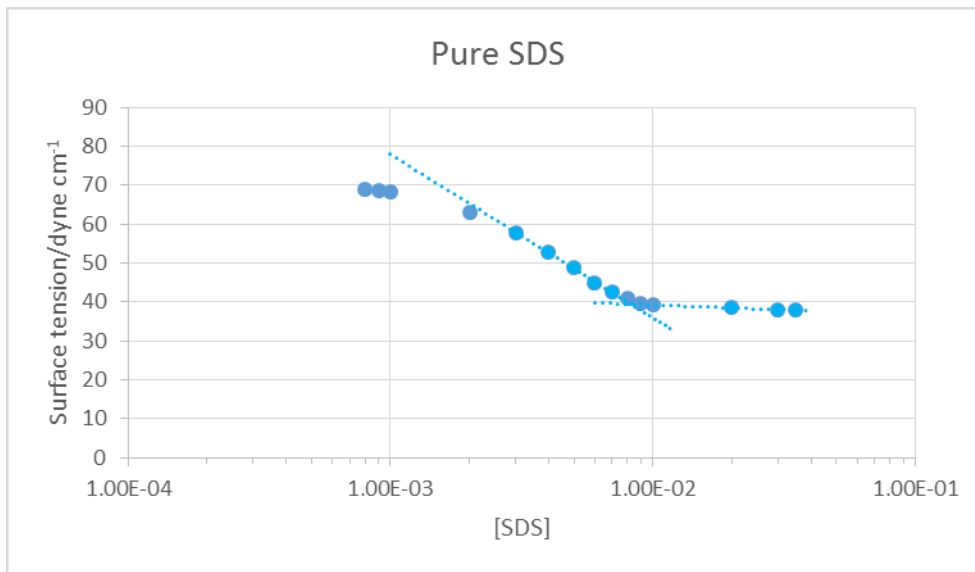

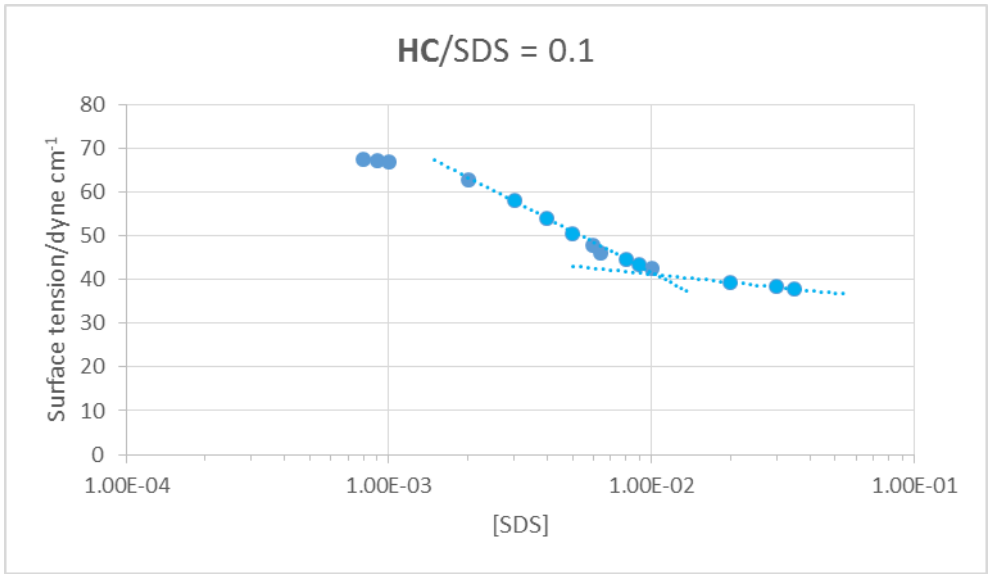
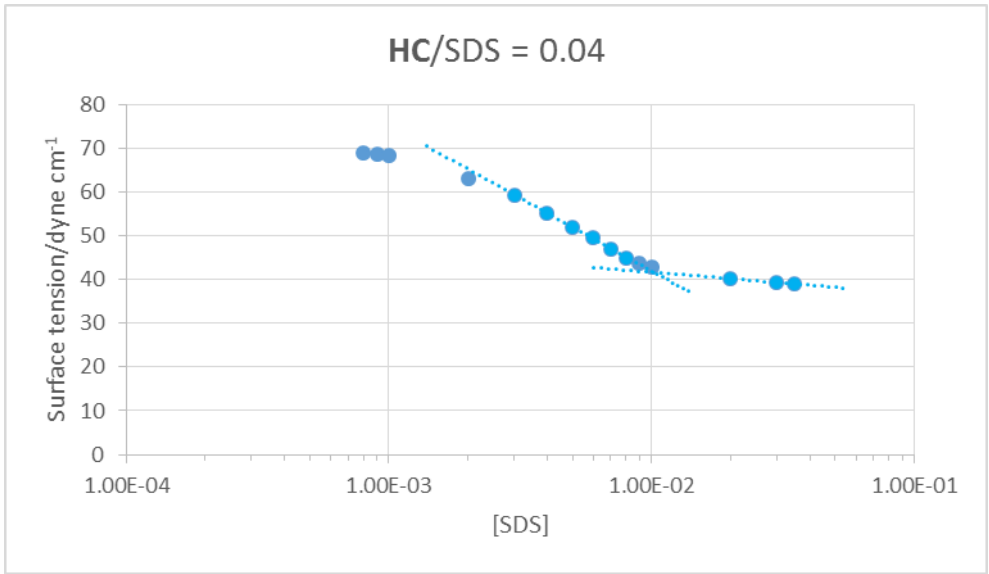




2.2 CTAB

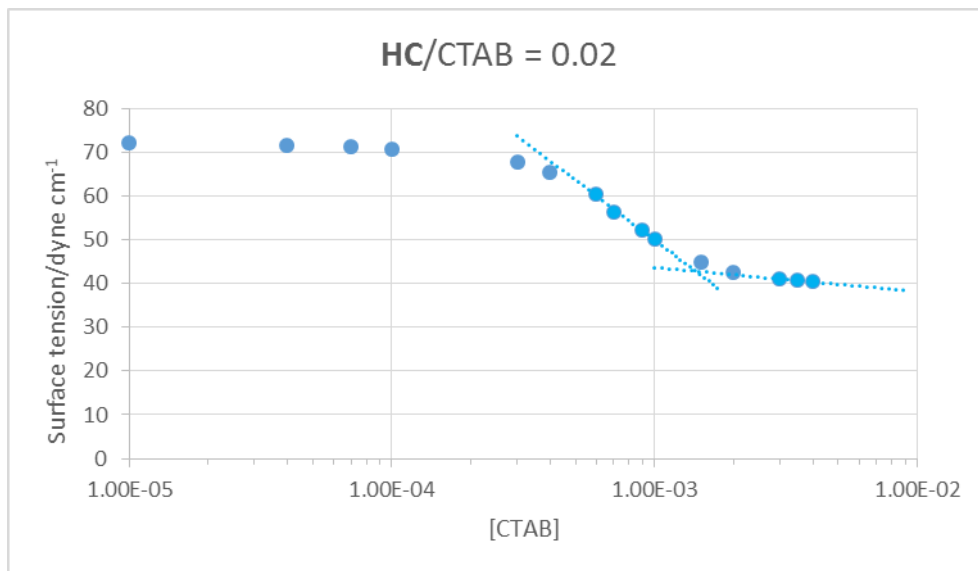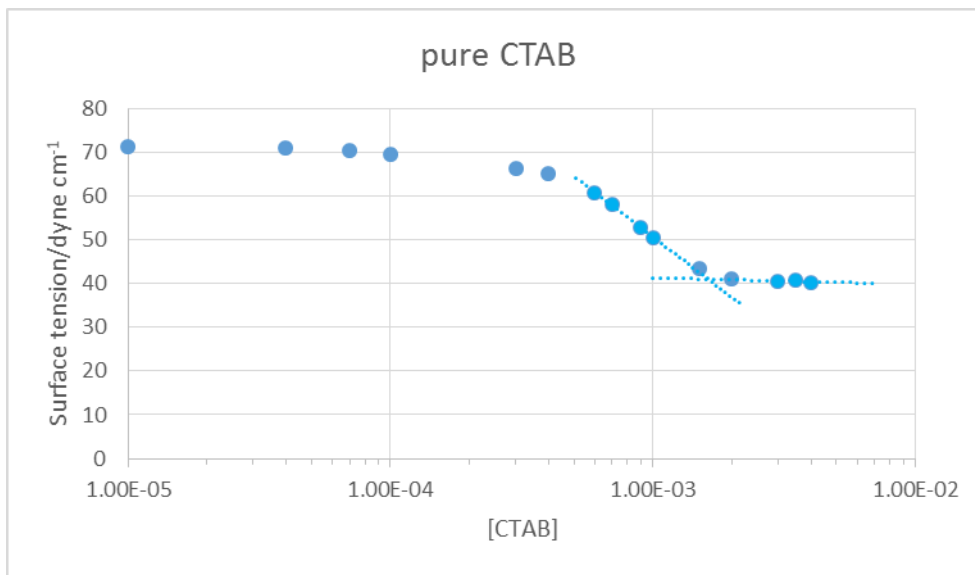


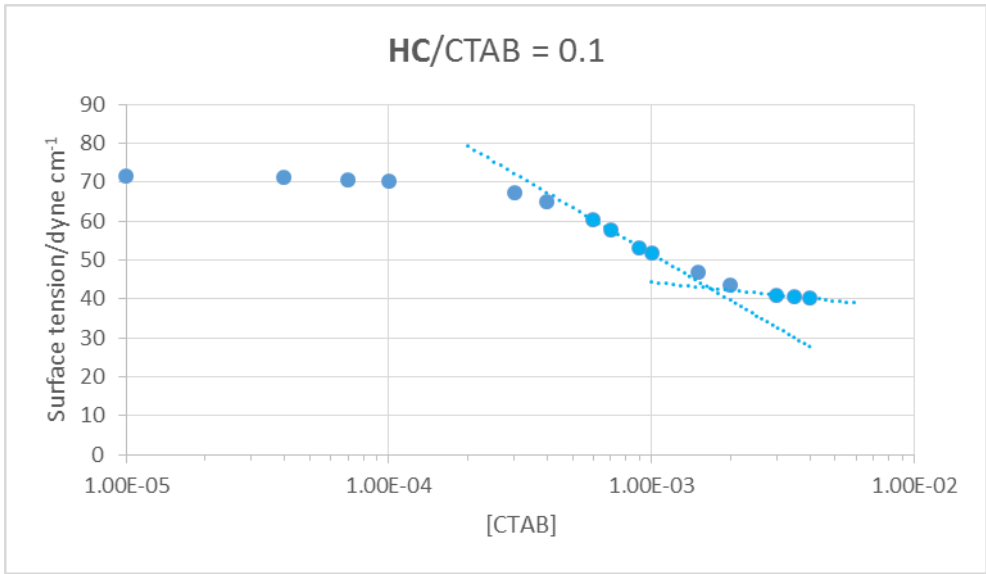
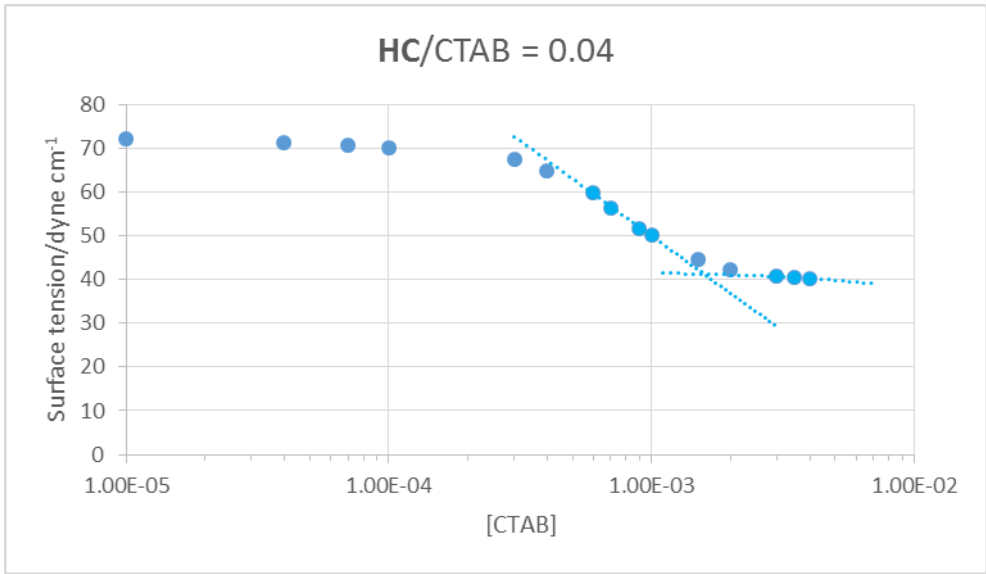


2.3 C₁₄DMAO

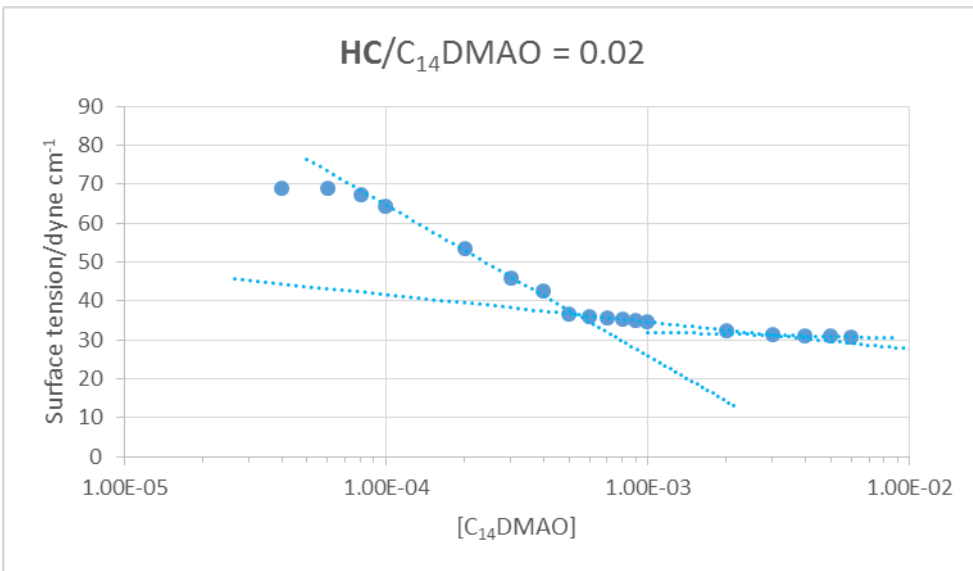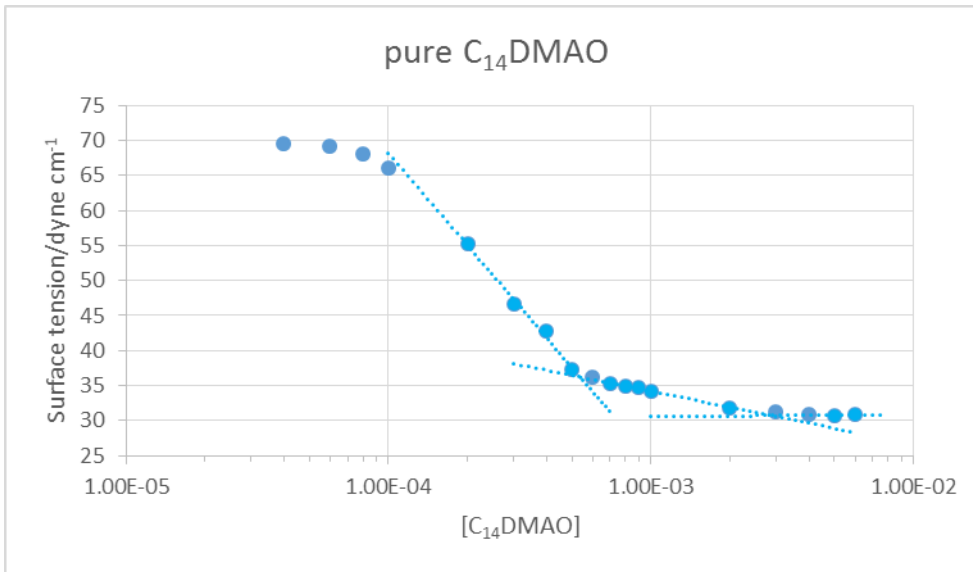


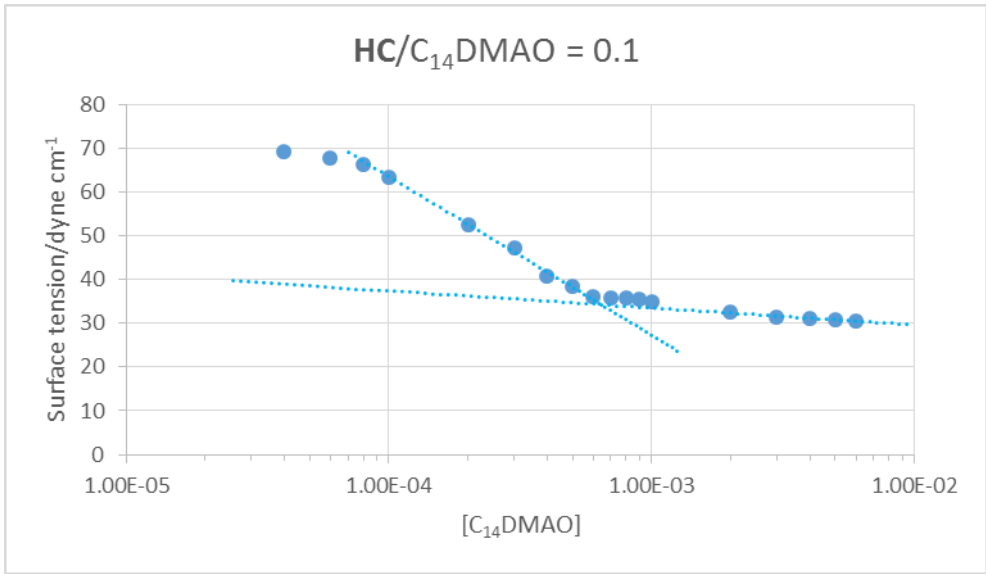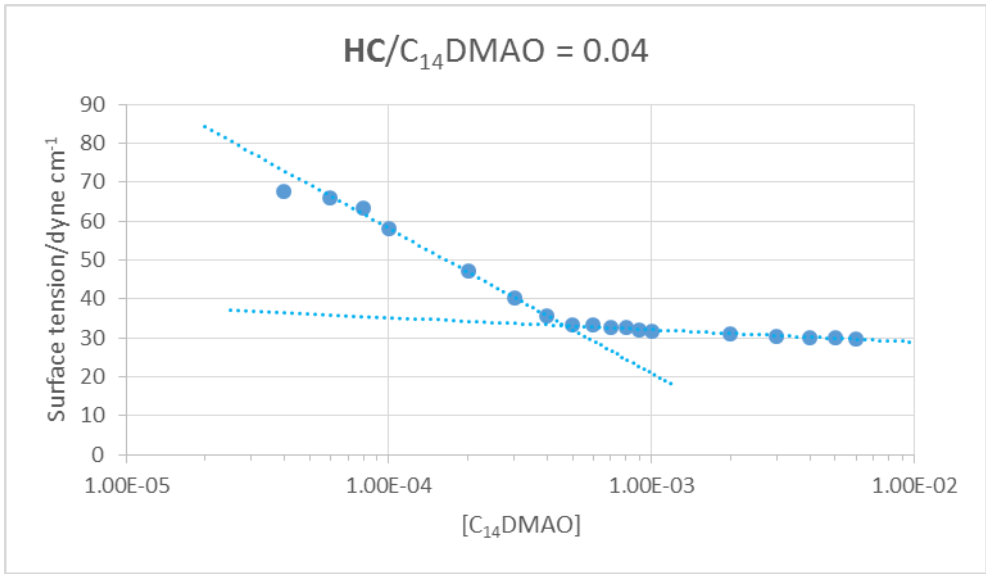

2.4 Triton X-100

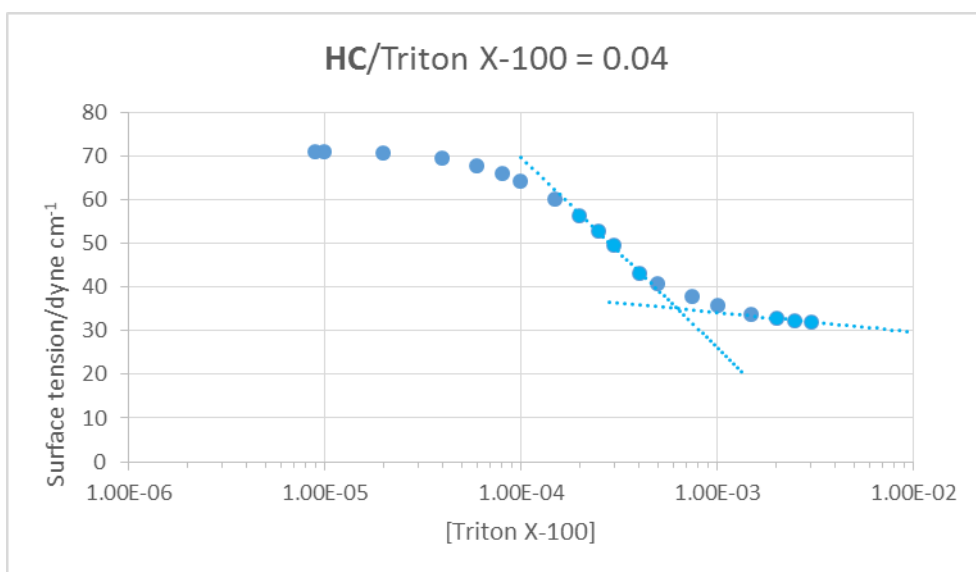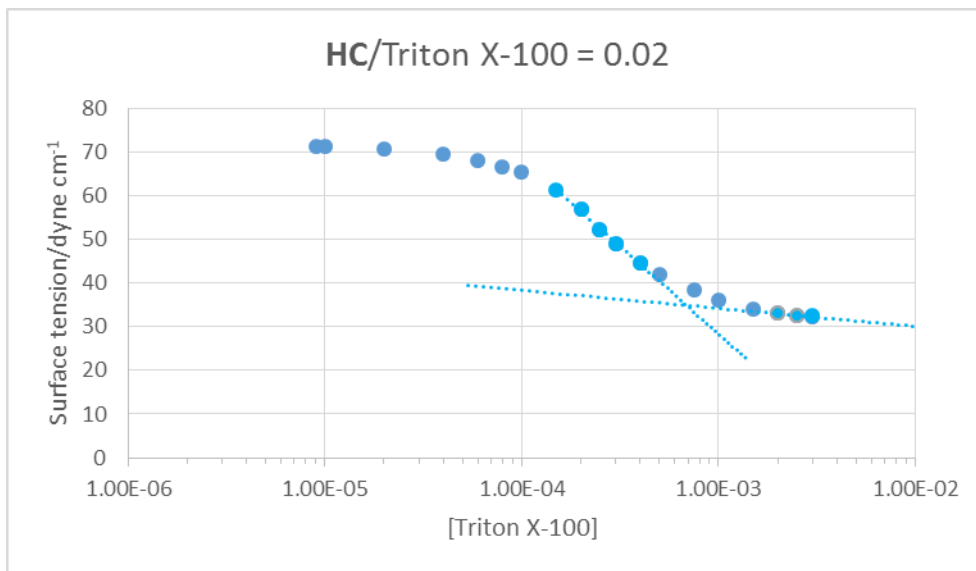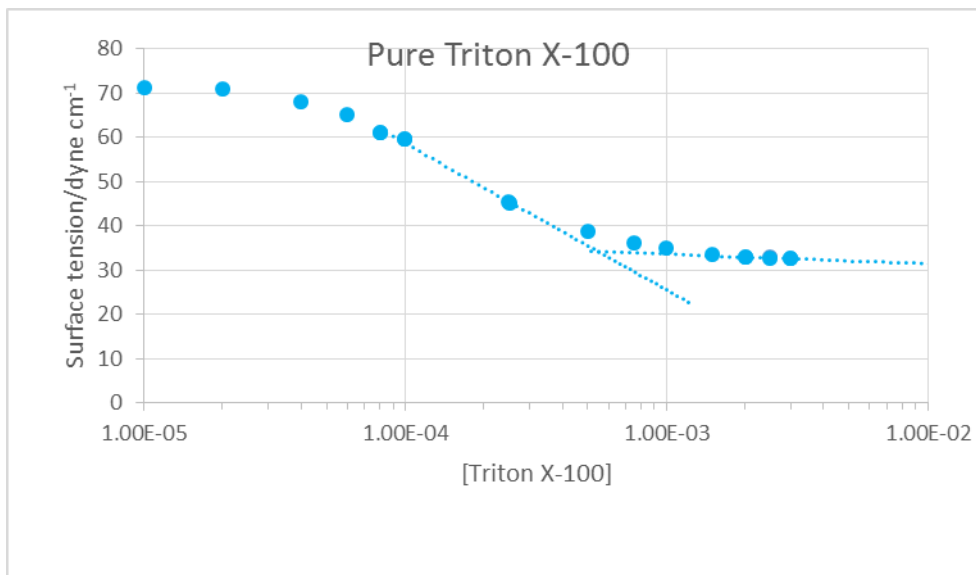

HC/Triton X-100 = 0.1

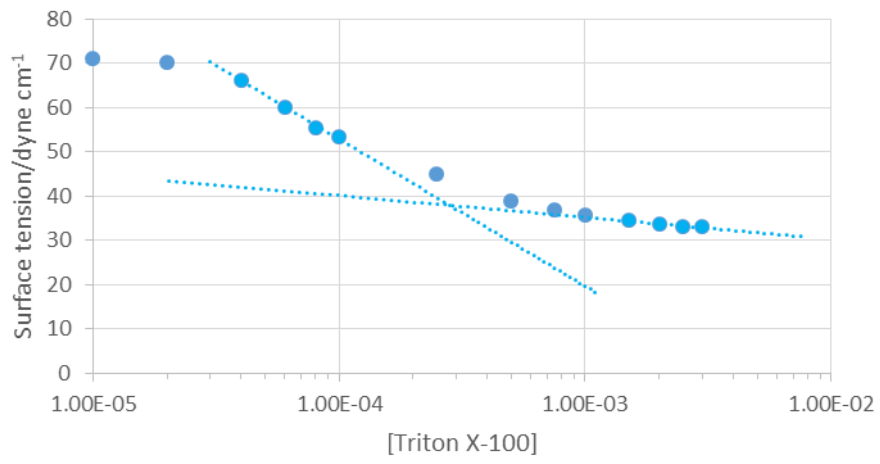

2.5 SDS/Hydrogenated cardanol mixture (HC/SDS = 0.1) in the presence of Orange OT



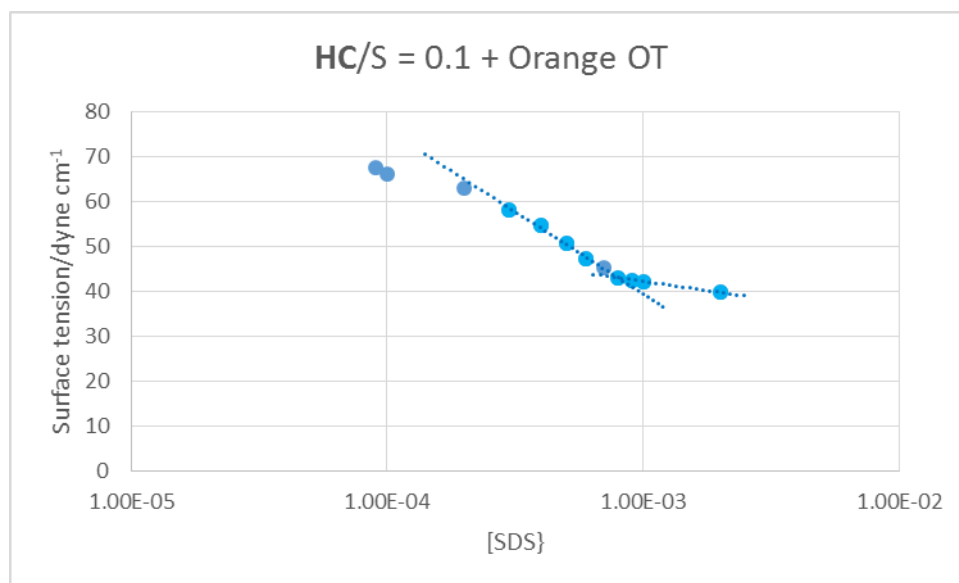


Table S1. CMC values (M) obtained by surface tensiometry.



Surfactant	Sample 1	Sample 2	Sample 3
Pure SDS	9.64×10^{-3}	8.25×10^{-3}	
HC/SDS = 0.02	9.48×10^{-3}	9.66×10^{-3}	
HC/SDS = 0.04	1.02×10^{-2}	9.80×10^{-3}	
HC/SDS = 0.1	1.01×10^{-2}	1.04×10^{-2}	
Pure CTAB	1.36×10^{-3}	1.73×10^{-3}	1.62×10^{-3}
HC/CTAB = 0.02	1.46×10^{-3}	1.43×10^{-3}	1.44×10^{-3}
HC/CTAB = 0.04	2.18×10^{-3}	1.50×10^{-3}	1.56×10^{-3}
HC/CTAB = 0.1	1.85×10^{-3}	1.28×10^{-3}	1.67×10^{-3}
Pure C ₁₄ DMAO	5.38×10^{-4} ; 2.88×10^{-3}	5.58×10^{-4} ; 2.49×10^{-3}	
HC/C ₁₄ DMAO = 0.02	5.32×10^{-4} ; 3.02×10^{-3}	4.61×10^{-4} ; 2.28×10^{-3}	
HC/C ₁₄ DMAO = 0.04	4.70×10^{-4}	4.55×10^{-4}	
HC/C ₁₄ DMAO = 0.1	6.44×10^{-4}	5.84×10^{-4}	
Pure Triton X-100	5.48×10^{-4}	4.80×10^{-4}	6.37×10^{-4}
HC/Triton X-100 = 0.02	6.03×10^{-4}	6.03×10^{-4}	6.87×10^{-4}
HC/Triton X-100 = 0.04	6.07×10^{-4}	7.10×10^{-4}	6.24×10^{-4}
HC/Triton X-100 = 0.1	5.51×10^{-4}	6.18×10^{-4}	7.03×10^{-4}

3. DLS traces and correlation functions



3.1 SDS 3×10^{-2} M

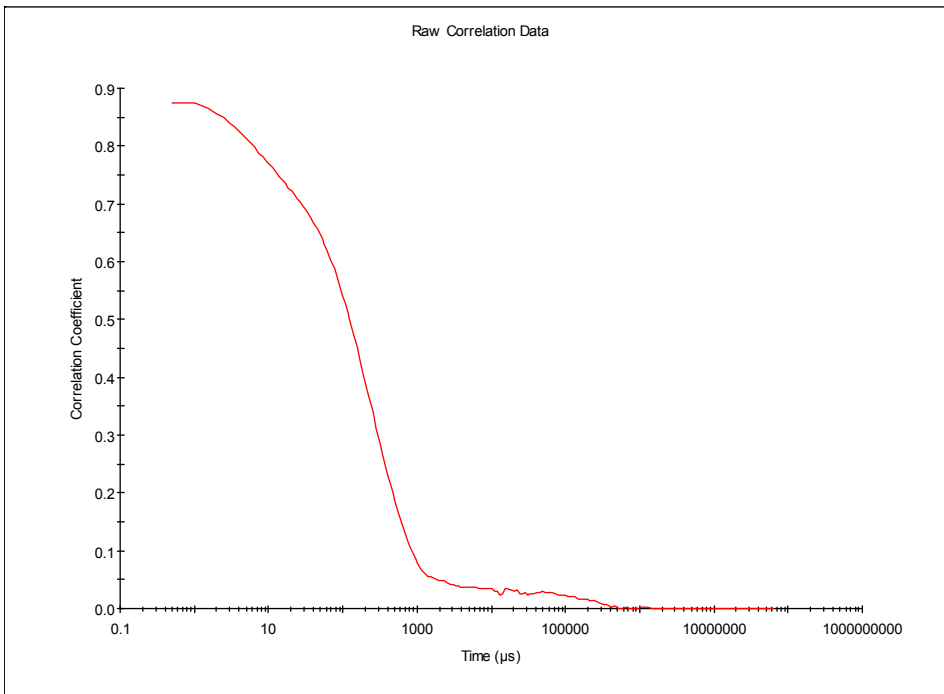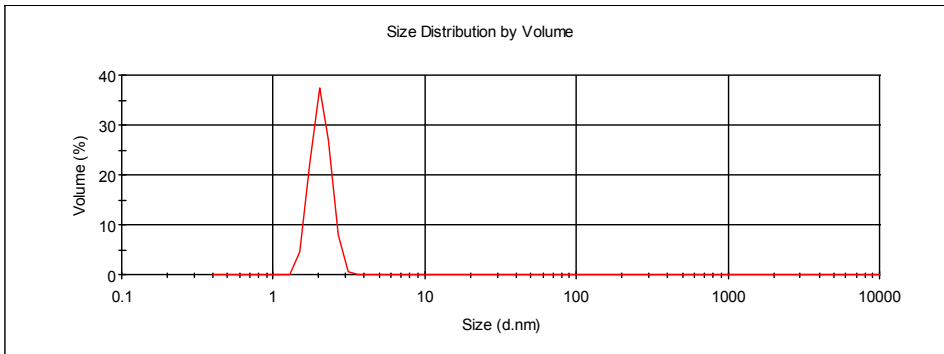



3.2 HC/SDS 0.1, SDS 1×10^{-2} M

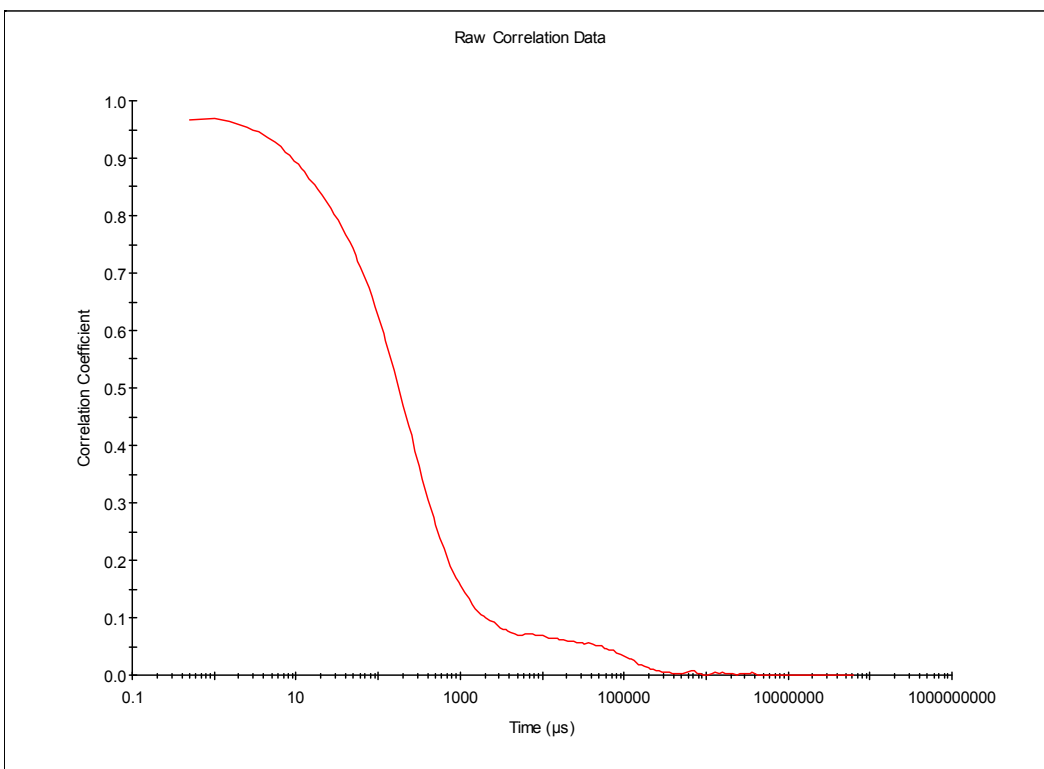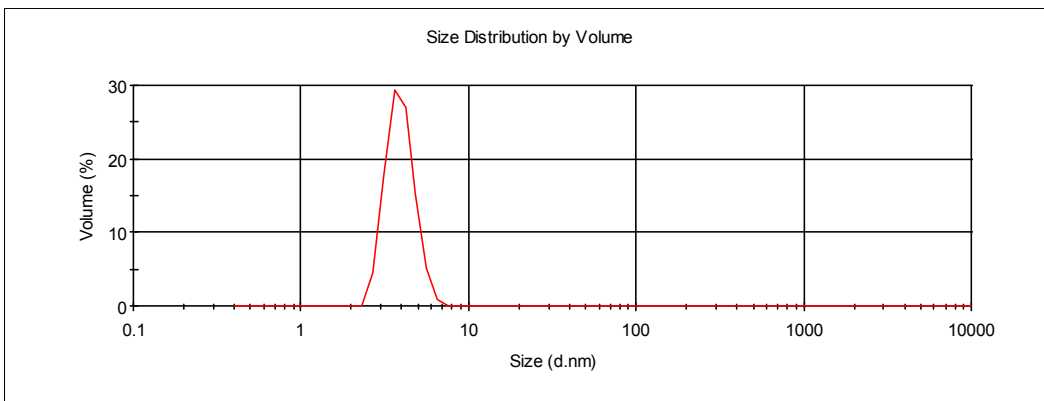



3.3 CTAB 1×10^{-3} M

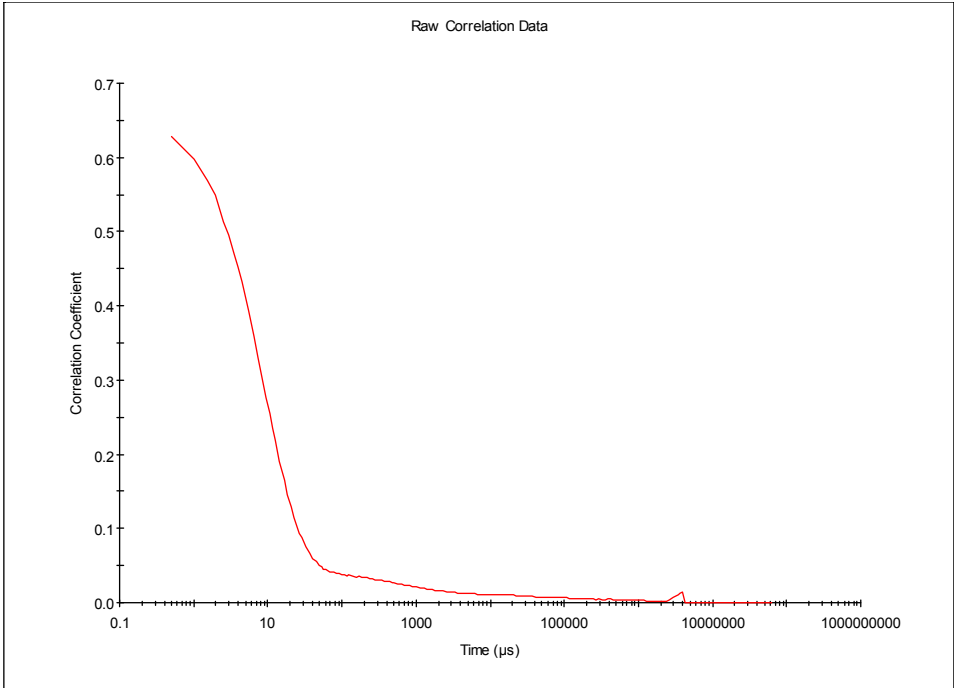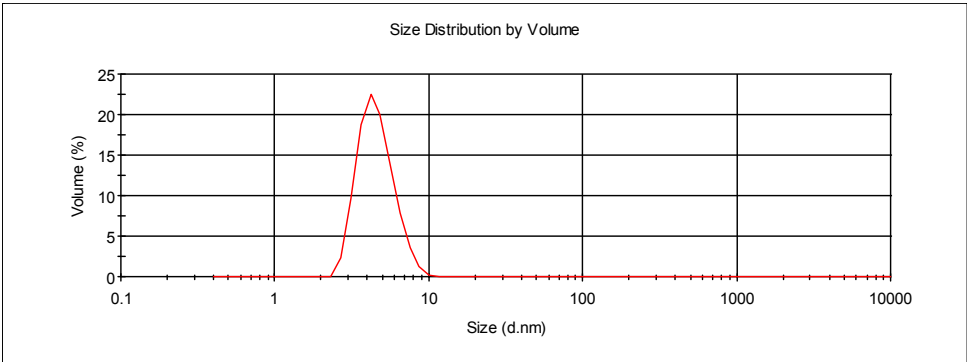



3.4 HC/CTAB 0.1, CTAB 1×10^{-3} M

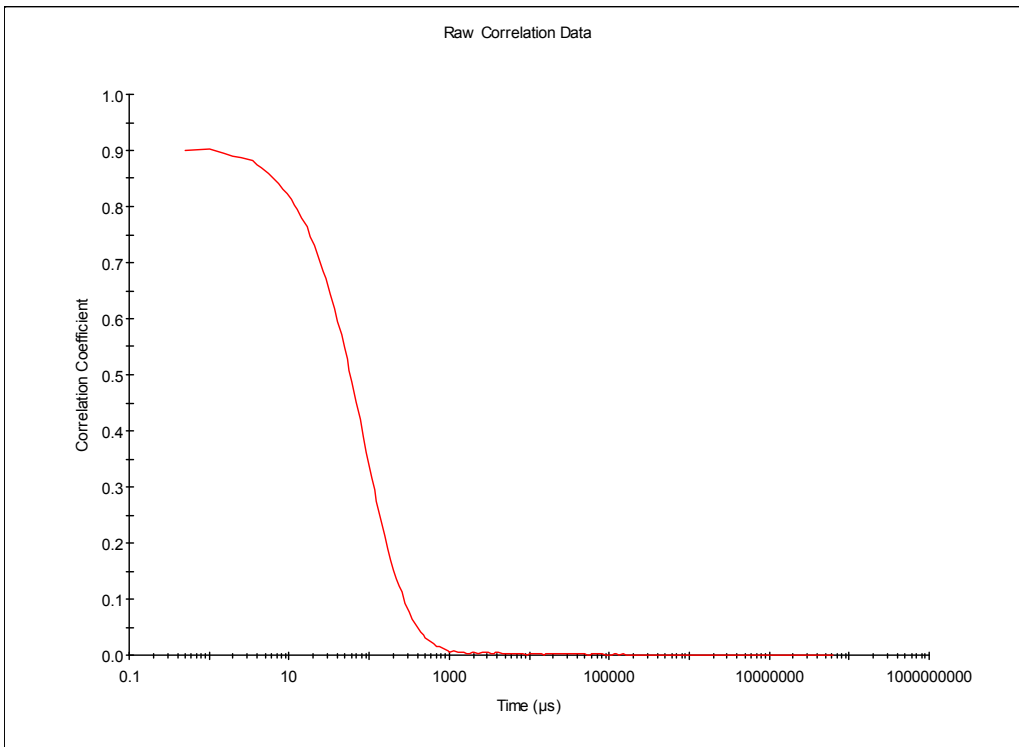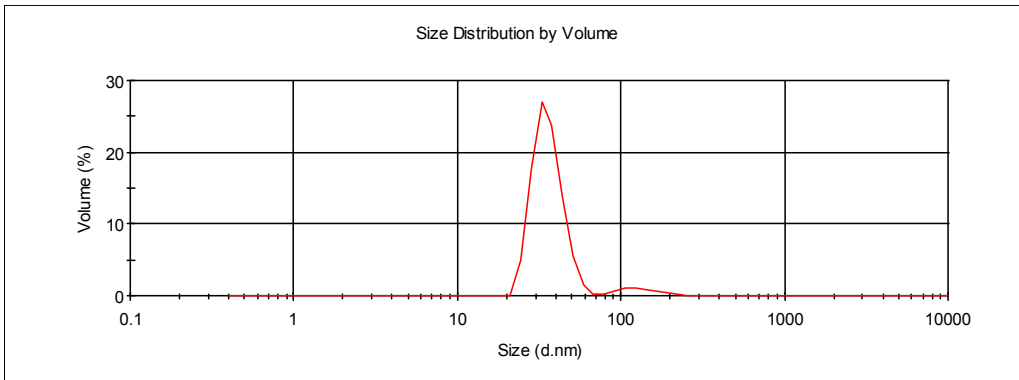



3.5 C₁₄DMAO 1×10⁻³ M

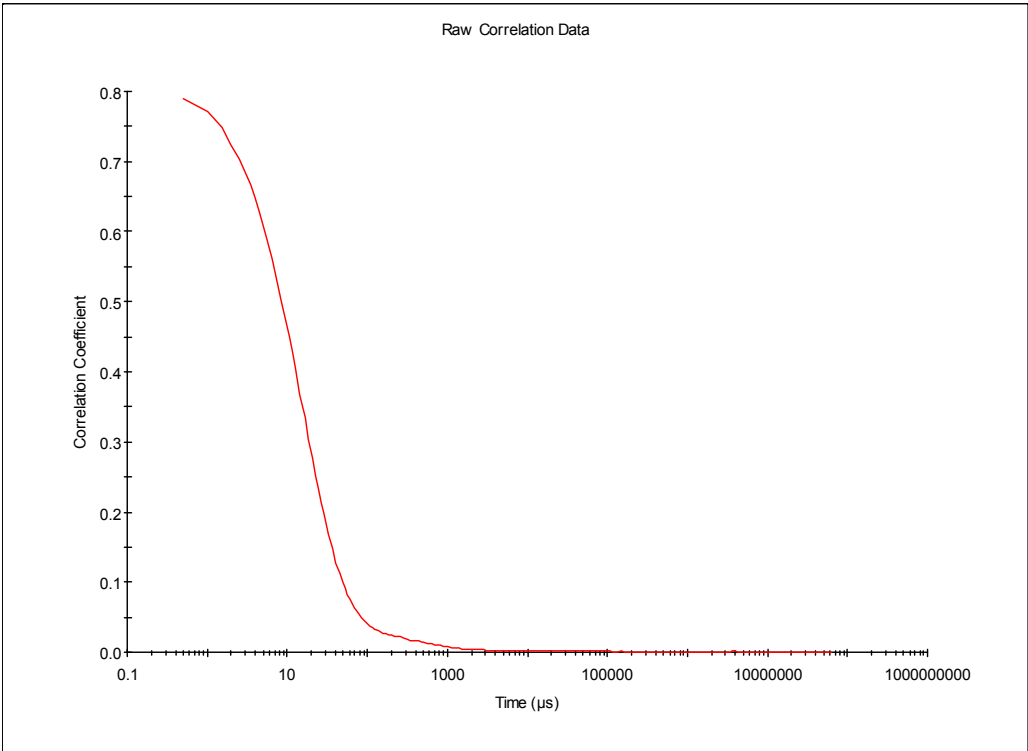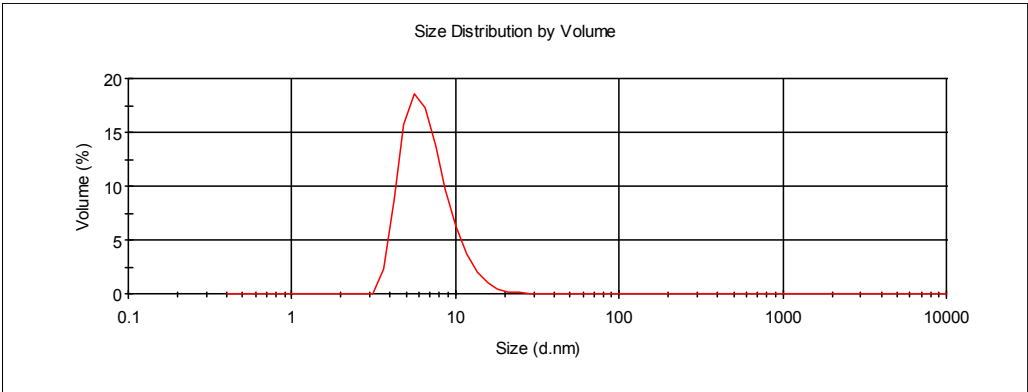

3.6 HC/ C₁₄DMAO 0.1, C₁₄DMAO 1×10⁻³ M

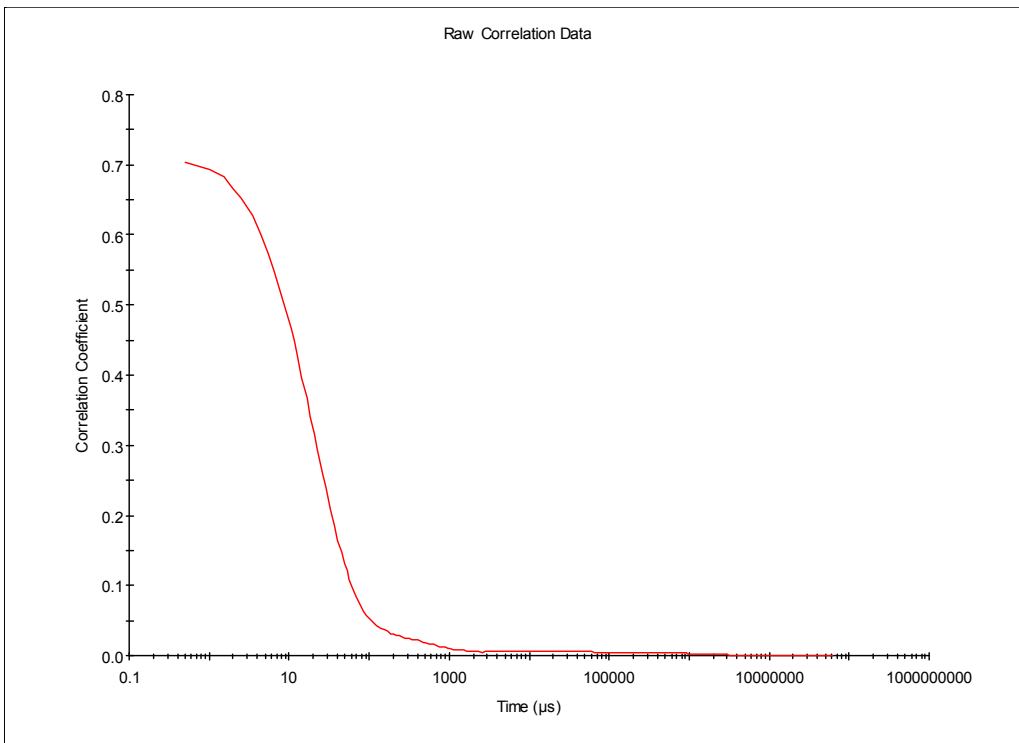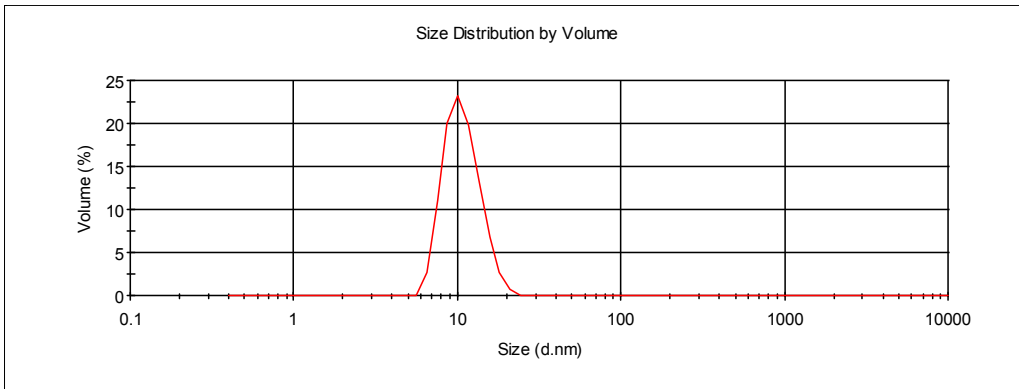

3.7 Triton X-100 1×10^{-2} M

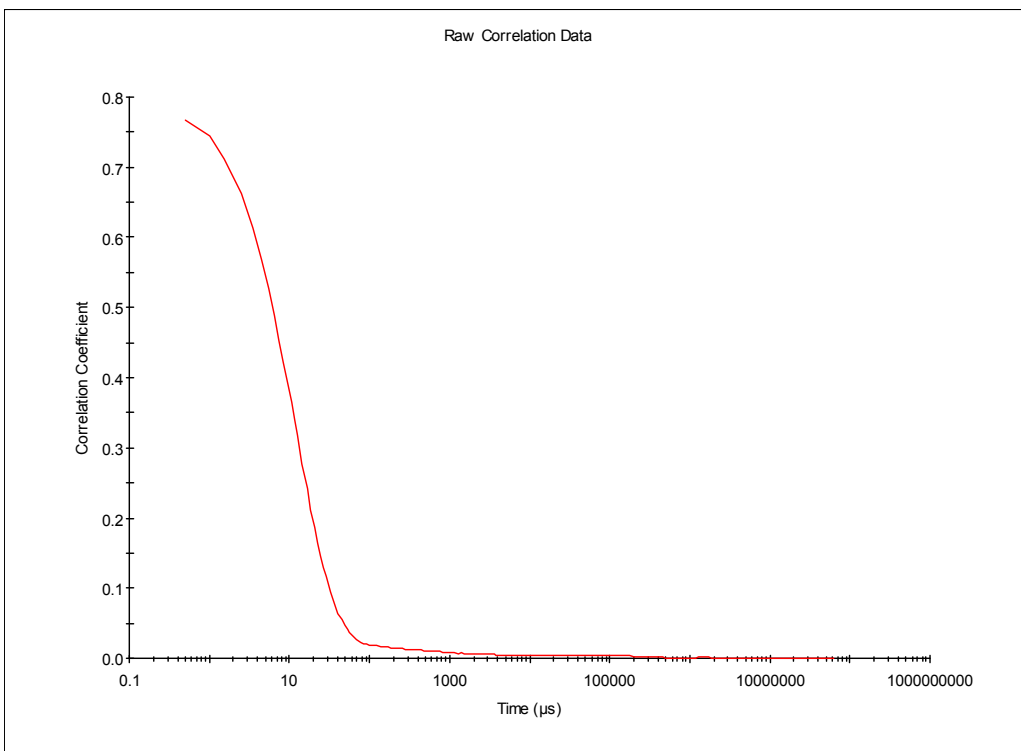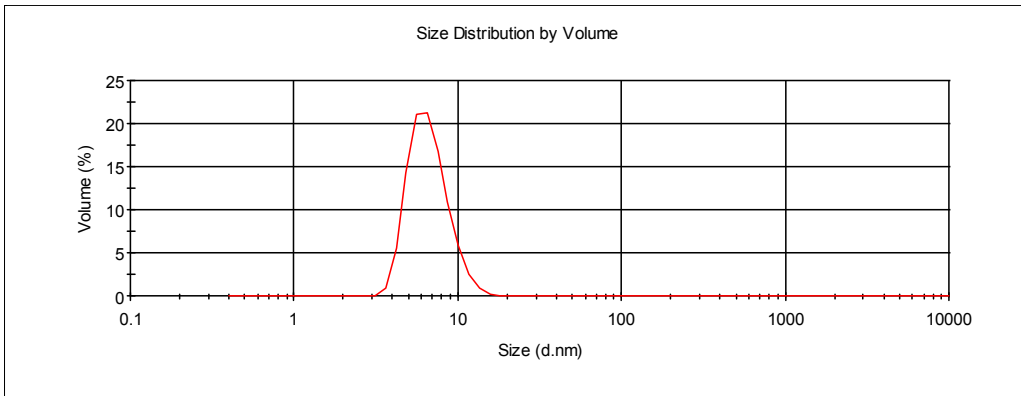

3.8 HC/Triton X-100 0.1, Triton X-100 1×10^{-2} M

